


2000mm FRAMED WETROOM SCREEN INSTRUCTION

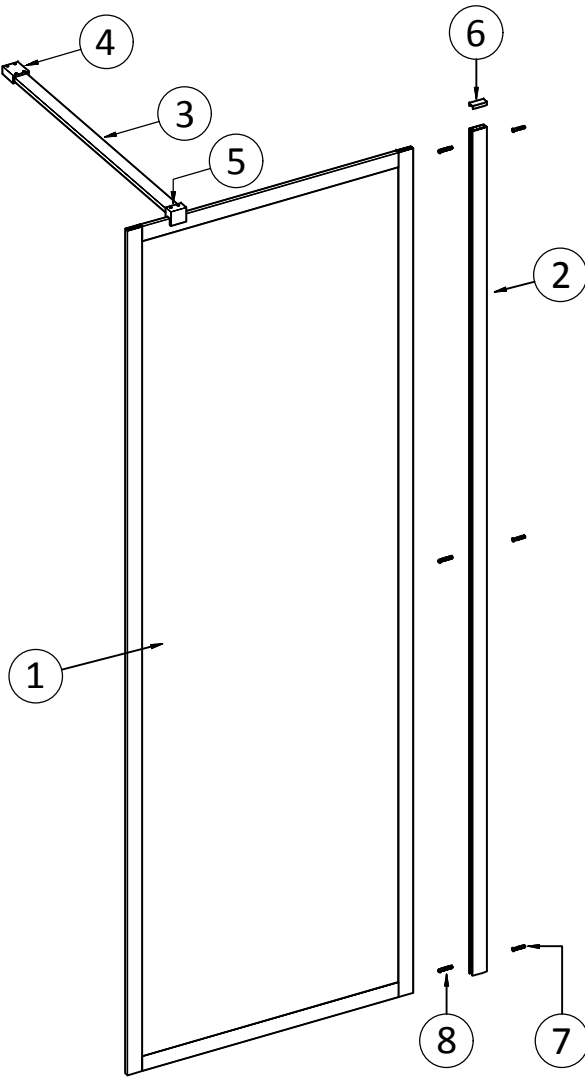

THIS INSTRUCTION COVERS MULTIPLE APPLICATIONS
(SOME PARTS OPTIONAL)

UNPACK THE BOX AND ENSURE ALL COMPONENTS ARE PRESENT.
NO REFUNDS OR REFITTING COST WILL BE GIVEN IF INCOMPLETE OR
DAMAGED GOODS ARE FITTED.

THE TOUGHENED SAFETY GLASS IS MANUFACTURED TO SPECIFICATION
EN12150-1 AND SHOULD BE HANDLED WITH CARE AS IMPACTS CAN
DAMAGE THE GLASS AND CAUSE IT TO FAIL AT A LATER DATE.


FIT THE SHOWER TRAY AS PER THE MANUFACTURERS INSTRUCTIONS.

NOTE! IF THE TRAY ISN'T TRUE AND LEVEL, IT MUST BE RECTIFIED BEFORE
SILICONING AROUND THE TOP EDGE OF THE TRAY WHERE IT MEETS THE
TILES. ALLOW THE SILICONE TO DRY BEFORE FITTING THE ENCLOSURE.

TOOLS REQUIRED:

- POWER DRILL
- 6mm MASONARY DRILL BIT
- CROSS HEAD SCREW DRIVER
- TAPE MEASURE
- PENCIL
- SILICONE GUN
- SANITARY GRADE SEALANT
- SPIRIT LEVEL


1

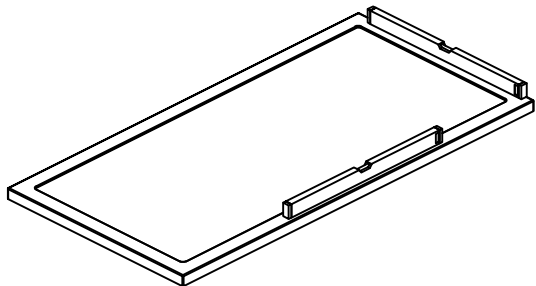

ENSURE THE TRAY IS LEVEL IN ALL PLANES.
IF THE TRAY IS NOT LEVEL IT WILL CAUSE FITTING AND DRAINAGE ISSUES.

	ITEM	DESCRIPTION	NOTES	QTY
PACK 1	1	FRAMED GLASS		1
PACK 2	2	WALL PROFILE		1
PACK 3	3	TOP BAR		1
	4	TOP BAR WALL SOCKET	INC' BRASS FIX PLATE	1
	5	GLASS CLAMP		1
	6	WALL PROFILE TOP CAP		1
	7	30mm SELF TAP SCREWS	WALL FIXING	5
	8	PLASTIC WALL PLUGS		5

WALL PROFILE
TOP VIEW

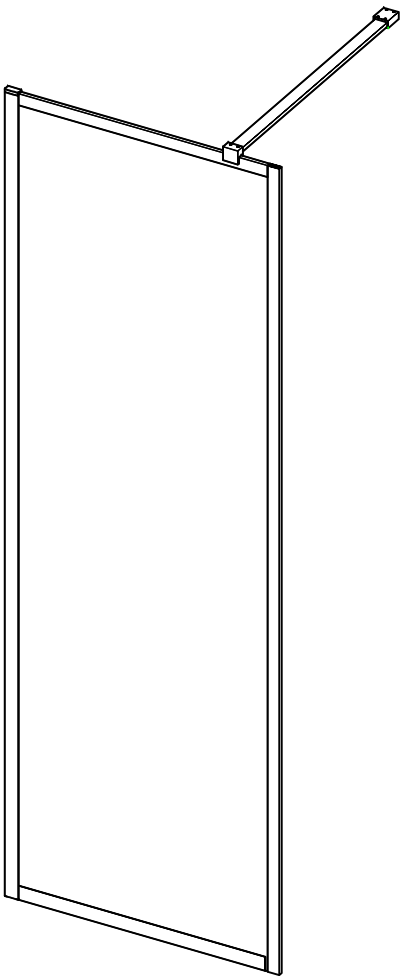



2

POSITION THE WALL PROFILE ON THE TRAY IN A SUITABLE POSITION (TYPICALLY 12mm IN FROM THE EDGE OF THE TRAY) WHILST ENSURING THAT THE CURVED FACE OF THE WALL PROFILE IS FACING OUTWARDS.

MAKE SURE THE PROFILE IS TRUE WITH A SPIRIT LEVEL, THEN MARK THROUGH THE FIXING HOLES WITH A PENCIL.



REMOVE THE PROFILE, THEN DRILL AND PLUG THE WALL. NOTE! THE FIXINGS SUPPLIED (7 & 8) ARE GENERAL PURPOSE AND MAY NOT BE SUITABLE FOR THE SUBSTRATE YOU ARE FIXING INTO.

FIT THE WALL PLUGS, THEN FIX THE WALL PROFILE IN PLACE.

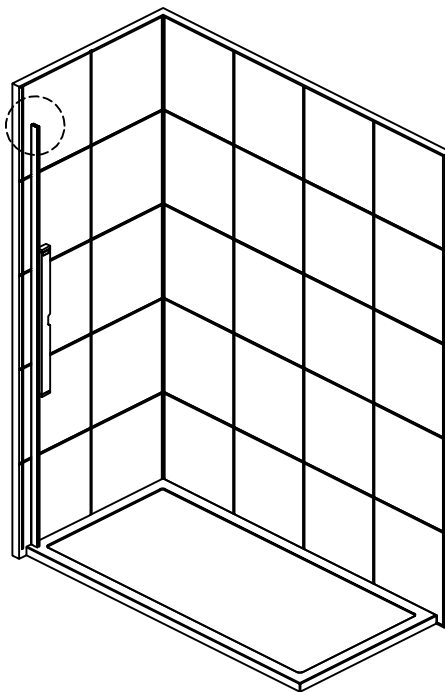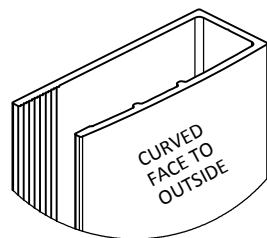

3


SLOWLY SLIDE THE WETROOM SCREEN INTO THE WALL PROFILE (FULLY HOME PREFERABLY). AVOID SCRATCHING THE HORIZONTAL PROFILES AND ADJUST AS REQUIRED.

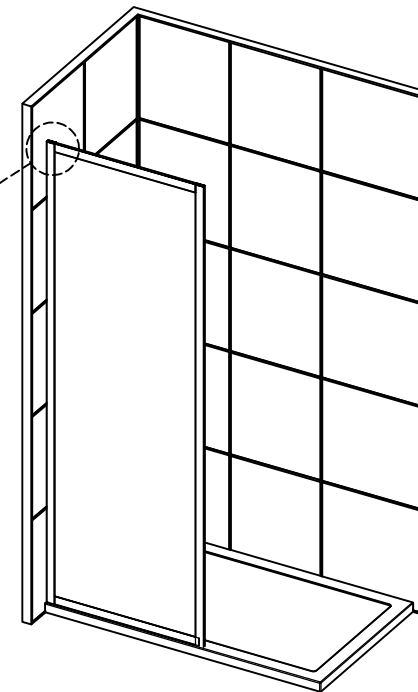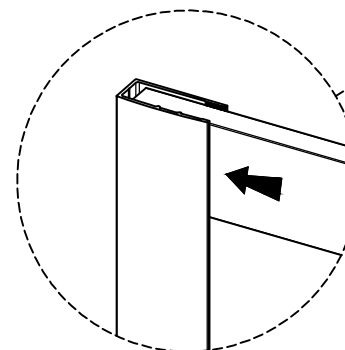

4

CUT THE TOP BAR TO LENGTH SO THE SCREEN IS PARALLEL TO THE BACK WALL

ENSURE TOP BAR IS LEVEL AND MARK FOR THE WALL SOCKET. GRUB SCREWS TO BE ON TOP SIDE.

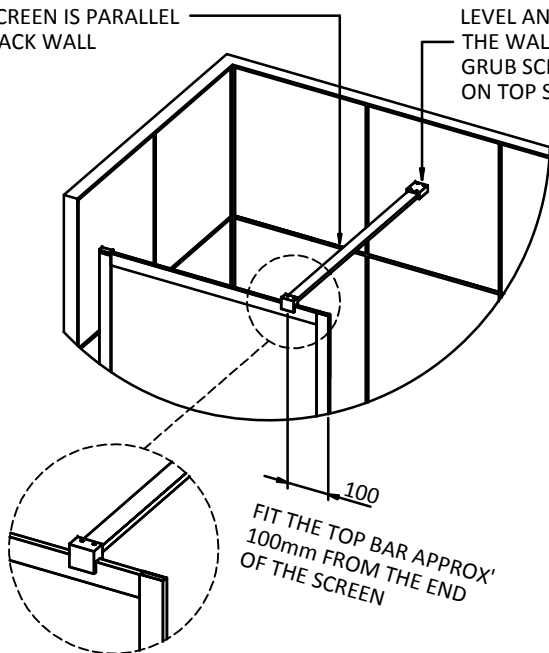

5

EXTERNALLY SILICONE SEAL WHERE THE WALL PROFILE MEETS THE WALL, ALL ALONG THE BOTTOM OF THE SCREEN ASSEMBLY WHERE IT MEETS THE TRAY AND 100mm UP THE JOINT AS SHOWN.

DO NOT SILICONE INSIDE THE ENCLOSURE.

ALLOW THE SILICONE AT LEAST 24 HOURS TO FULLY CURE. AFTERCARE - ENSURE YOU CLEAN YOUR PRODUCT USING A MILD DETERGENT DILUTED IN WATER, REMOVING ANY RESIDUE WITH A SOFT DAMP CLOTH.

MAINTENANCE - ENSURE PARTS ARE FREE FROM ANY DEBRIS OR SOAP BUILD UP.

TROUBLE SHOOTING GUIDE

IS THE TRAY LEVEL? (SEE STEP 1).
ARE THE WALL PROFILES PLUMB VERTICALLY? (SEE STEP 2).

6

FIT WALL PROFILE TOP CAP.

