


GENERIC FITTING GUIDE

SQUARE THERMOSTATIC BAR SHOWER MIXER with RIGID RISER KIT

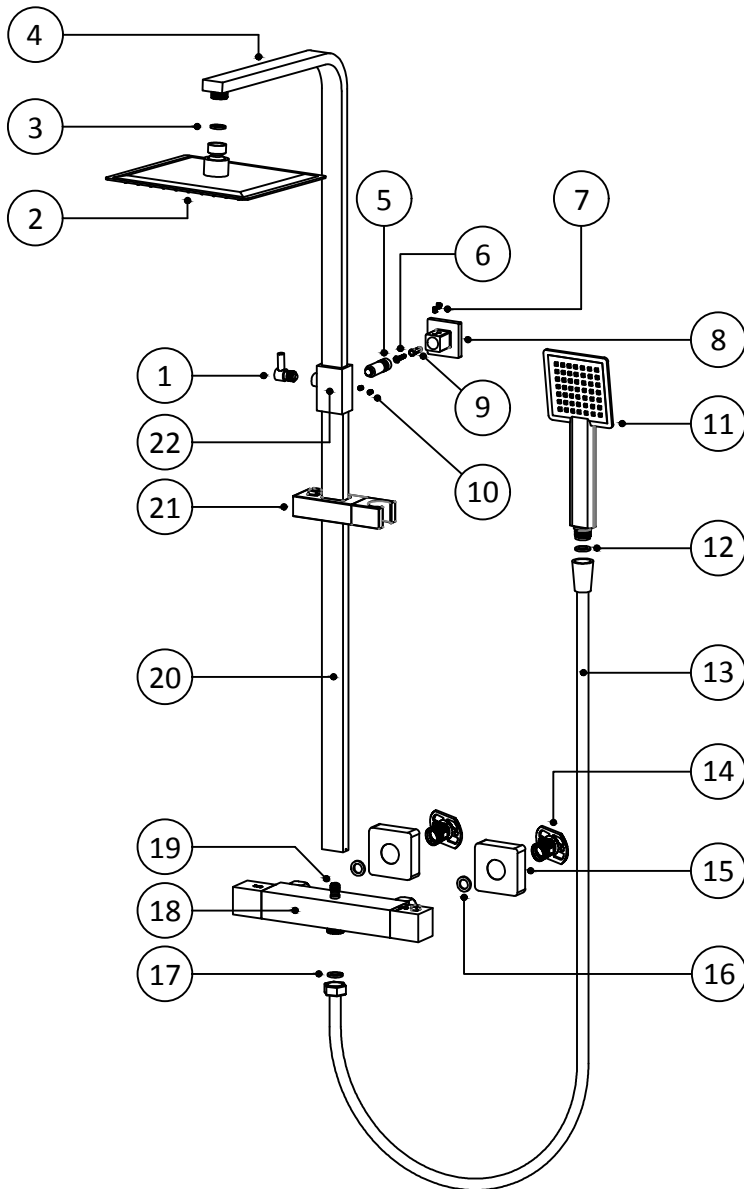

1. TIGHTENING LEVER
2. SHOWER HEAD
3. WASHER
4. UPPER RISER
5. WALL BRACKET EXTENSION
6. WALL FIXING SCREW
7. GRUB SCREWS
8. WALL BRACKET
9. WALL PLUG
10. GRUB SCREW (22)
11. HANDSET
12. WASHER
13. SHOWER HOSE
14. FAST FIX CONNECTORS
15. COVER
16. WASHER
17. HOSE WASHER
18. BAR VALVE
19. CONNECTING SPIGOT
20. LOWER RISER
21. HANDSET HOLDER
22. CONNECTOR

Guarantee & Aftercare

When installing or using tools, extra care must be taken to avoid damaging the finish or fitting. To maintain the appearance, please ensure it is cleaned regularly using a clean soft damp cloth only. Abrasive cleaners or detergents must not be used as they may cause surface deterioration. The company provides a guarantee against faulty material or manufacture excluding serviceable parts, providing they have been installed, cared for and used in accordance with our instructions.

Any misuse will invalidate your guarantee

Water Supply Regulations

This product has been manufactured to comply with the appropriate BS EN Standards and to conform to Water Supply Regulations 1999.

Earth Bonding

Earth any new pipework satisfactorily (Seek expert advice if in doubt).


The company reserves the right to continually evolve its product lines without notification.

The company will not accept any liability regarding specification changes and their consequences unless previously quoted by the company in writing.

Installation


1. Please check that all components are present.
2. Before installation ensure that all feed lines are clear of debris and isolation service valves are fitted for any subsequent servicing that may be required.
3. Ensure water pressure is 1 bar minimum.
4. Pictures in the manual are general in content and may not represent exactly your purchased shower unit. If you are having difficulties please contact a professional plumber.

1

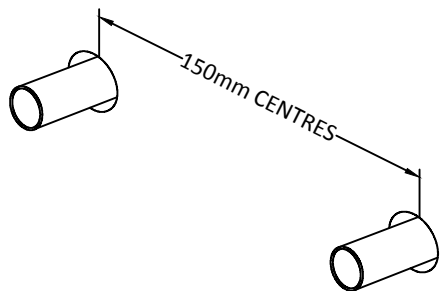


Pipe centres need to be 150mm.
Ensure supply pipes protrude far enough from the finished surface to be able to connect with the bar valve

2

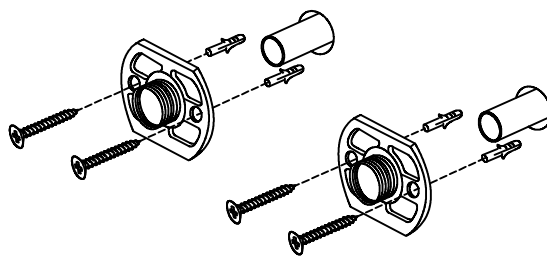


Securely fix the fast fix pipe connectors to the wall using suitable fixing (Not supplied).

3

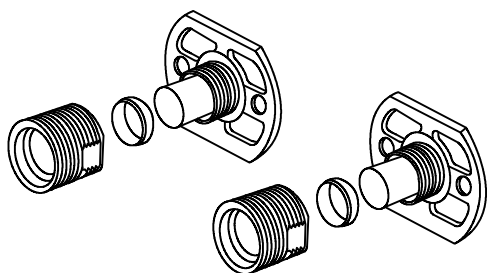


Place the olives over the supply pipes, and fit the threaded collar, ensuring water tight connections are made.

4

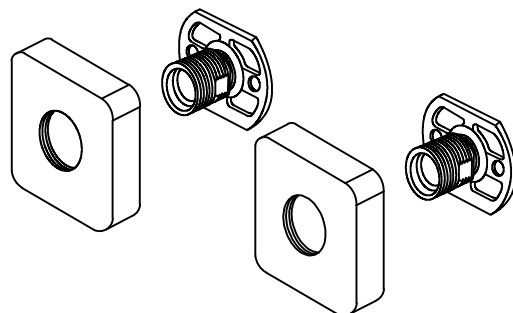


Fit the decorative shrouds over the threaded collars and fit the bar valve.

5

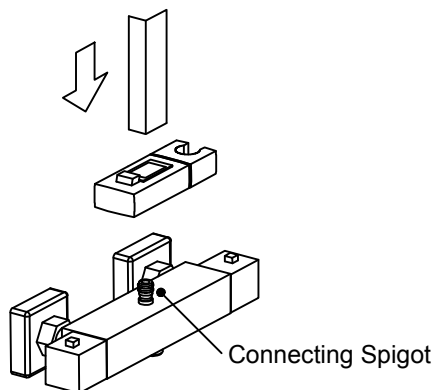


Fit the handset holder (21) onto the lower riser (20)
To fix the lower riser to the bar valve, simply push down firmly onto connection spigot (19).

6

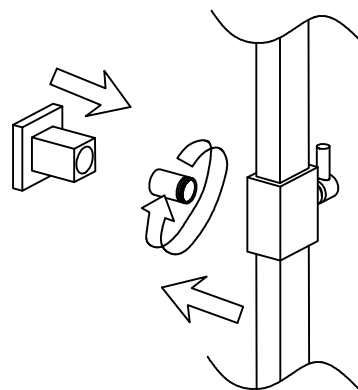


Fit the wall bracket to the riser kit.

7

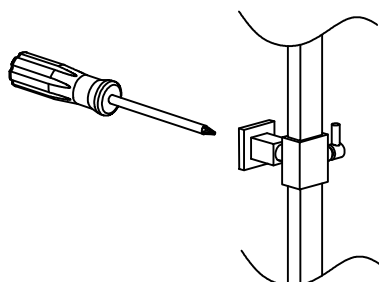

Make sure the riser is level, mark the position of the screw holes on the wall bracket.

8

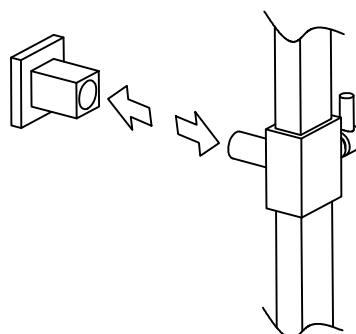

Remove the riser.